

ASSEMBLY INSTRUCTIONS


KITCHEN

adairs kids


Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or a rug to prevent from being scratched.

3+


Ax1

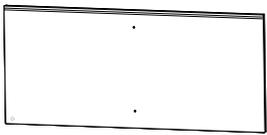


B1x1

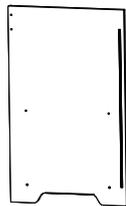


Cx1

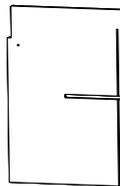


B2x1

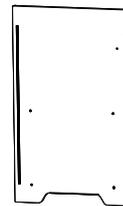


Dx1

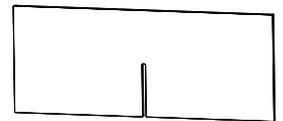


Ex1

 


Fx1

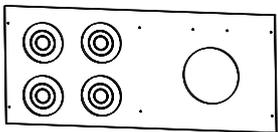


Gx1

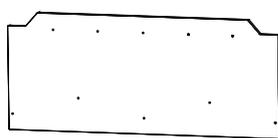


Hx2

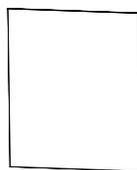


Ix1

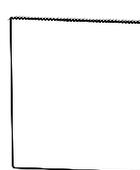

Jx1

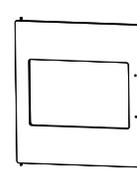

kx1

 

Lx1



Mx1



Nx5



Ox1



x1



x1



x1




ax2



bx6



 cx31



WARNING:


Assembly by an adult.
Contains small parts.



ASSEMBLY INSTRUCTIONS


KITCHEN

STEP1

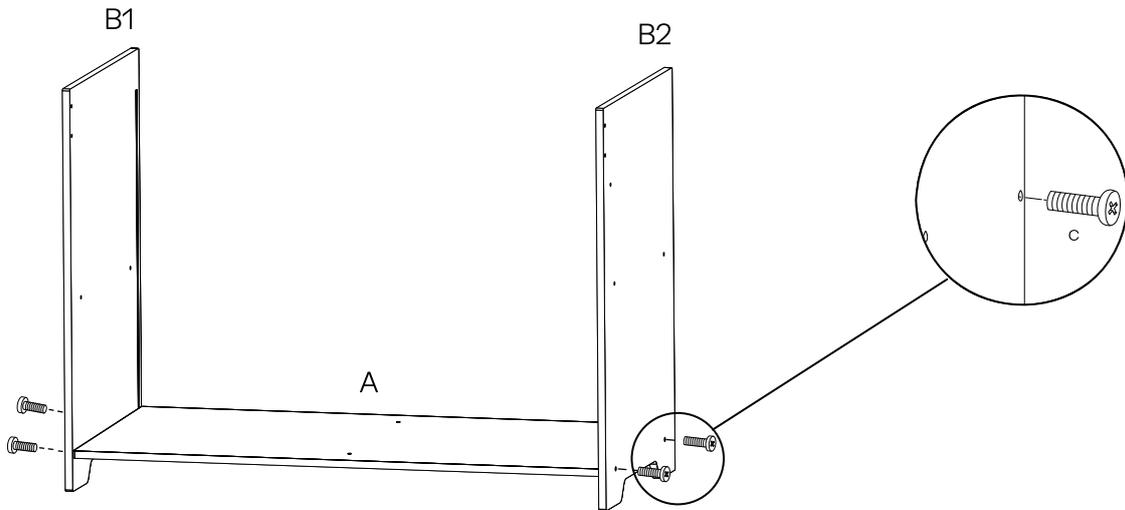


c  x4

STEP2

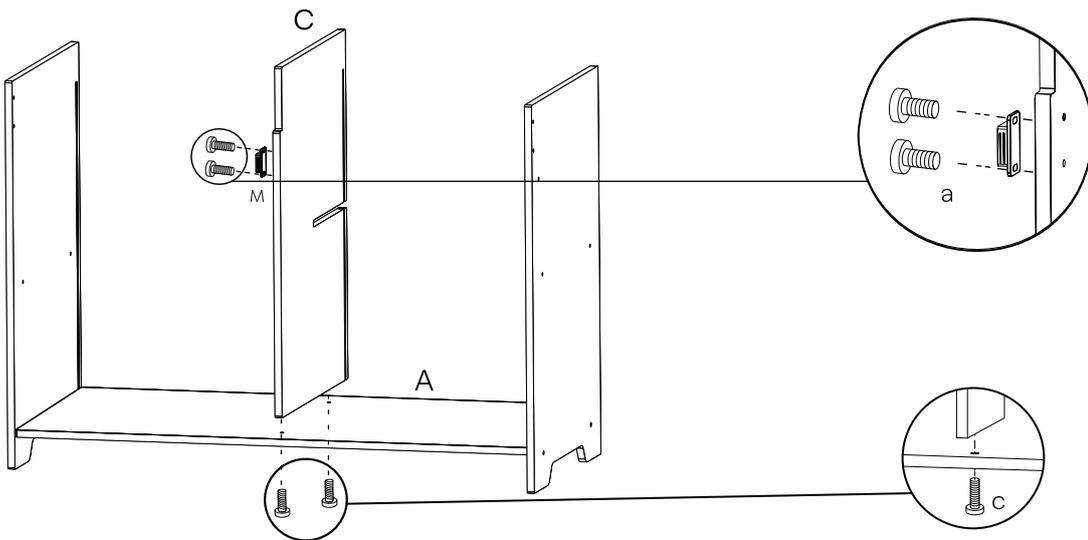


a  x2 c  x2

STEP3

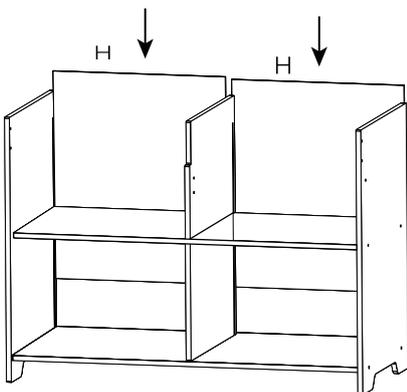

STEP4

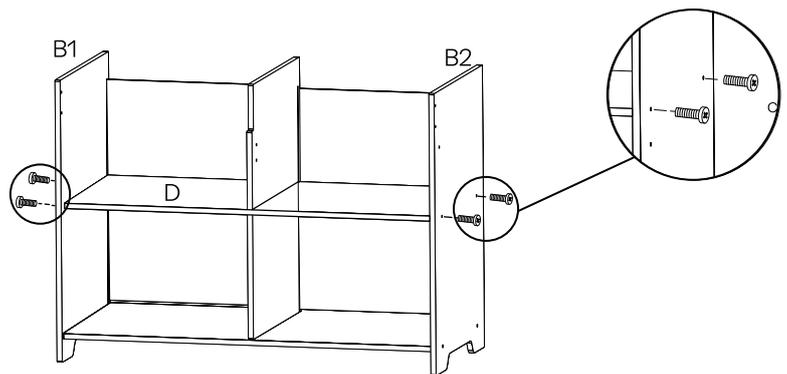


c  x4

ASSEMBLY INSTRUCTIONS


KITCHEN

STEP5

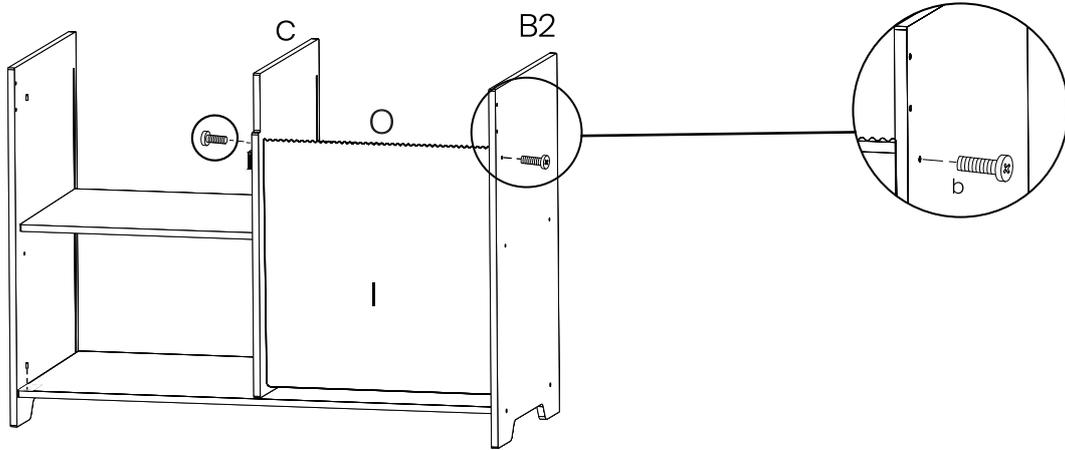


b  x2

STEP6

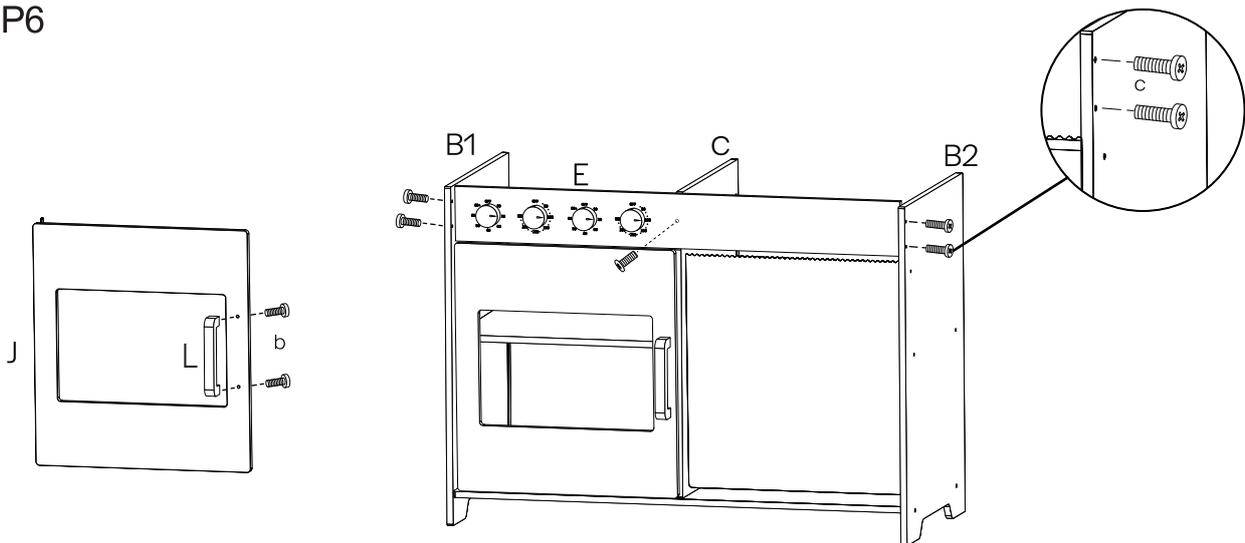

b  x2 c  x5

STEP7

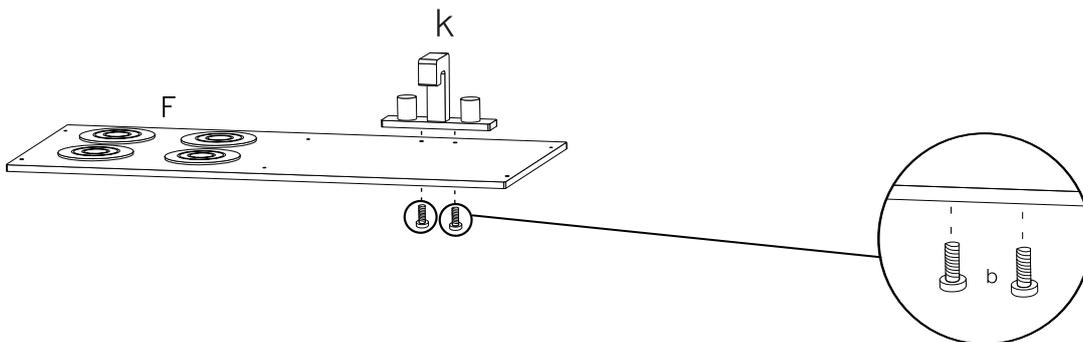


b  x2

ASSEMBLY INSTRUCTIONS


Kitchen

STEP8

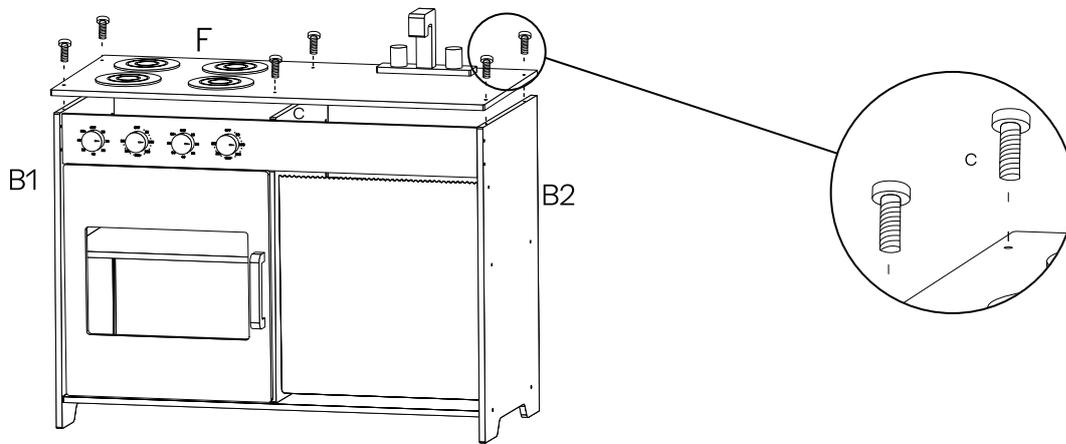


C  x6

STEP9

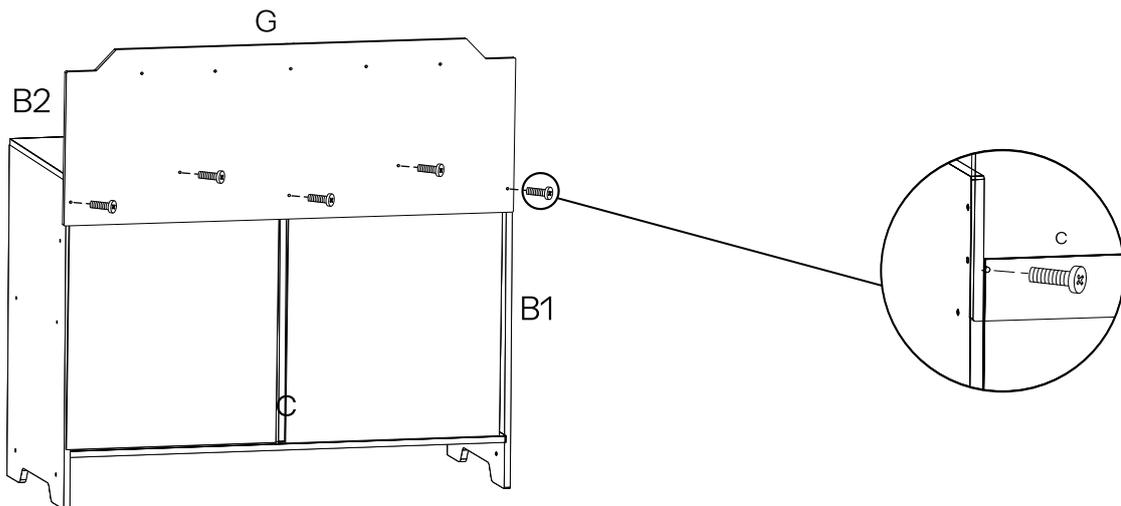

C  x5

STEP10

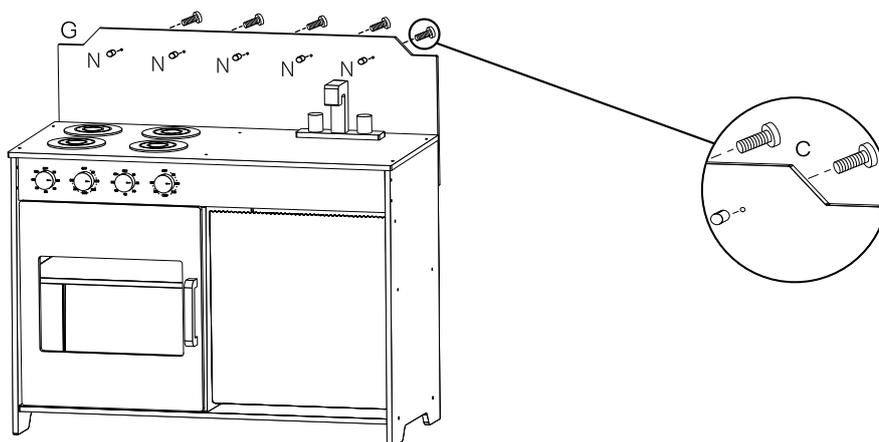

C  x5